


CLIP FOR LEAD LINING OF FRAMES – ALL LEAD LINING SUPPLIED BY OWNERS

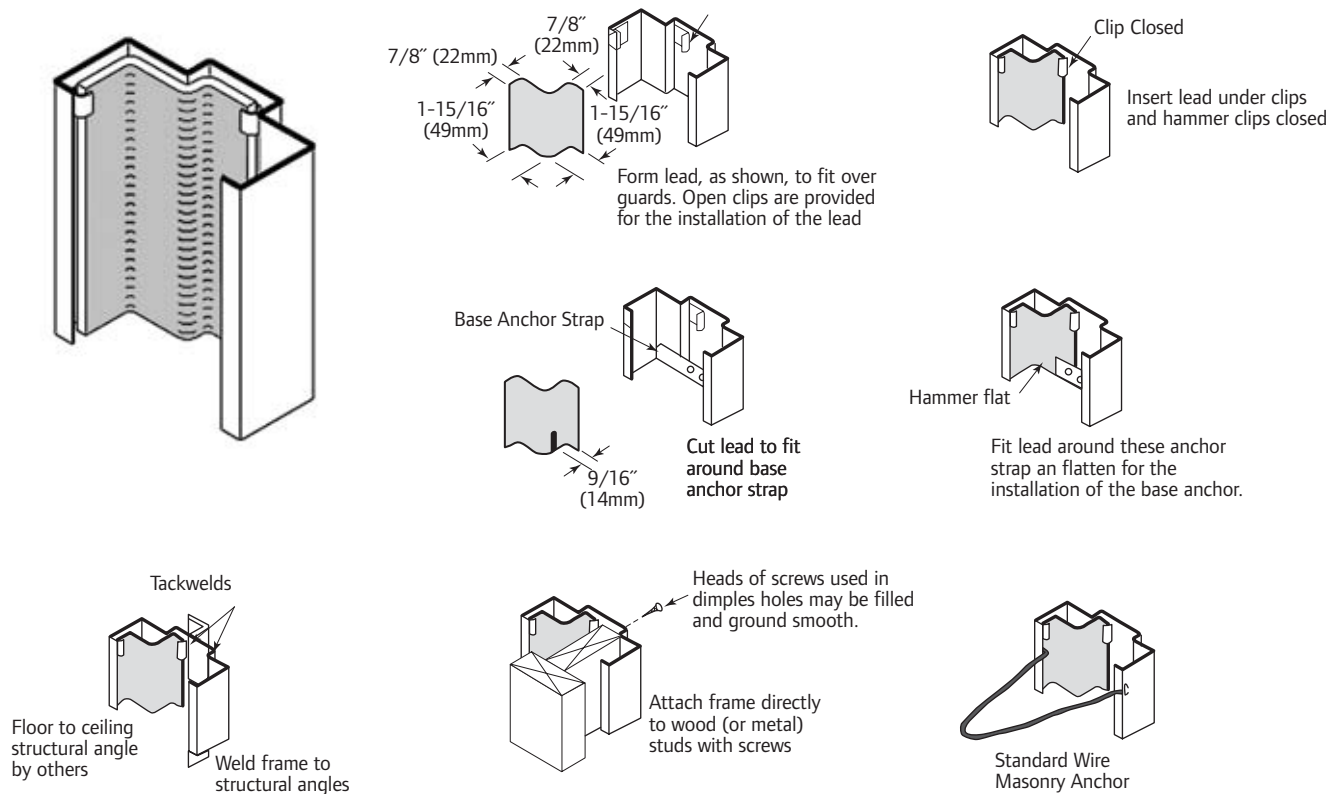

Application:

Lead lined frames are intended for use in the X-ray Room locations in Health Care facilities.

- Frames are supplied knock-down (KD). Frame preparation and installation of lead lining by others.
- Thickness of lead varies as required or specified for the type of equipment being used.
- Lead is located on the door side of the frame, covering the inside surfaces of the face, rabbet, stop and part, or all, of the soffit. Lead linings are to be overlapped at the miters of the frame.
- It is recommended that the installation of the lead be done by a local lead contractor who may also be installing lead in the walls, floor and ceiling of the room where the lead lined frame is being used.

Purpose:

Attachment clips are furnished for the installation of lead lining in frames used in X-Ray rooms.

Product Availability:

This product option is available for Steelcraft non-labeled F and MU Series frames.

NOTES:

1. **LEAD SUPPLIED BY OTHERS.**
2. **CAUTION:** Any cutting of lead to fit around hardware reinforcements can cause leakage of X-Rays through the frame.
3. The doors, walls and other perimeter construction must also include integral lead lining.